

OPERATING INSTRUCTIONS (220-240V~ Model)

PACKED BOX CONTENTS

OPTI Solar 250 LED Projector with 85mm Lens fitted. 2 metre IEC Lead.

Carefully unpack and keep packaging for the return of equipment for servicing. Ensure all items specified are in the box. If not, contact your sales outlet or us at the address on this document. If the equipment appears damaged in any way, return it to sales outlet in its original packaging. No responsibility for damage arising from the use of non-approved packaging will be accepted.

POWER RATING 62W MAX

OPERATING VOLTAGE 220-240V~ 50-60Hz

FUSE


Mains: T1AH/250V ceramic (20mm x 5mmØ)

Before replacing a fuse, **DISCONNECT PROJECTOR FROM THE MAINS SUPPLY.**

MOUNTING THE PROJECTOR

Ensure that the projector is secured to a surface or structure, able to bear the weight of the projector and accessories, via the bracket fitted using suitable central bolt (minimum: 14mm M10 x 20mm), washers and attachments. For added strength in a fixed position on a flat surface, use the bracket as a marking template for drilling fastening holes. Use a minimum of 2 fasteners such as 2 x 40mm No 10 wood screws.

There are four options:

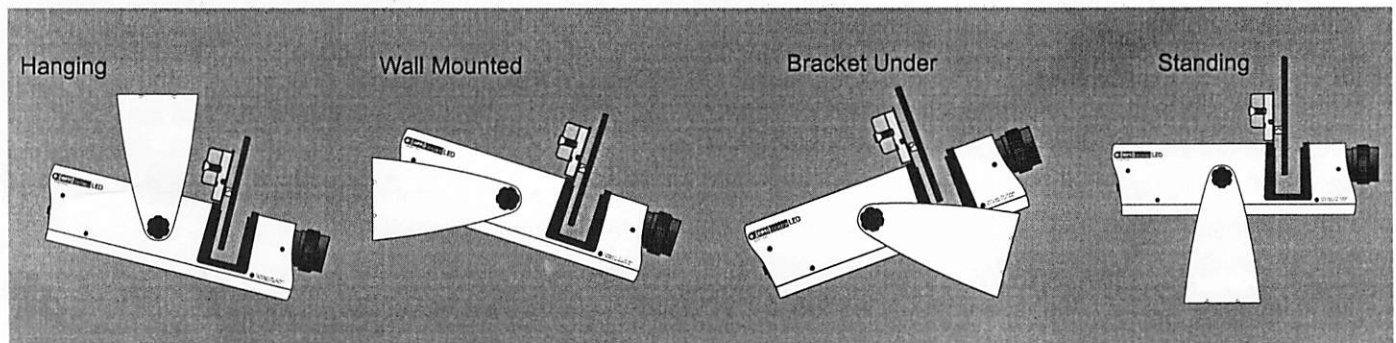

ADJUSTING THE BRACKET

Adjust the angle and position of the effects projector using the knobs, which connect the bracket to the unit.

1. Loosen the two knobs.
2. Rotate the bracket or the projector.
3. Tighten the knobs.



Instructions

Important Safety Instructions and Warnings

When using your projection equipment always observe the following safety precautions:

1. Read and understand all instructions before using the equipment.
2. This equipment is for indoor use in moderate climates only. Never use the equipment in damp or wet conditions. Avoid excessive heat, humidity, dust & vibration.
3. To reduce risk of electric shock, do not use where the projector may be subjected to dripping or splashing liquids. Never immerse products in any liquids.
4. Connect only to a power supply with a voltage corresponding to that printed on the projector.
5. This projector must always be connected to a grounded (earthed) electricity supply.
6. Always use the mains lead supplied suitable for your country.
7. Do not operate appliance with a damaged cord, or if the appliance has been dropped, or damaged, until it has been examined by a qualified service person.
8. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance must be used. Cords rated for less amperage than the appliance may overheat.
9. To avoid the possibility inadvertent resetting of the thermal cutout, this appliance must not be supplied via an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off
10. Ensure all cables are routed safely to avoid tripping or pulling; also avoid sharp bends, pinches and contact with hot surfaces.
11. The appliance power switch has the symbols 'O' indicating 'OFF' and 'I' indicating 'ON'.
12. Do not obstruct any ventilation openings. To avoid thermal 'cut out' or heat damage make sure all air inlets and outlets are clear of obstruction before and during use.
13. Children over 8 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the appliance if under close supervision or given instructions how to use the appliance safely and they understand the hazards involved. Do not leave unattended or allow children to play with the appliance or allow them to clean or carry out any maintenance work.
14. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury.
15. DO NOT USE THE PROJECTOR AT AN ANGLE OF MORE THAN 90° FROM HORIZONTAL as this may cause an effect or effect accessory to separate from the projector, fall and break which may also cause injury.
16. During focusing beware of rotating the projection lens too far out, as this can cause the lens to separate from the projector, and may drop and break which could cause injury.
17. Always disconnect appliance from electrical outlet when not in use or moving. Never yank cord to pull plug from outlet. Grasp plug and pull gently to disconnect.
18. To reduce the risk of electric shock - do not dismantle this appliance. Take it to a qualified repairer when servicing is required.
19. Always unplug appliance from electrical outlet and allow to cool before any cleaning and/or servicing.
20. After any maintenance or cleaning all parts must be absolutely dry before refitting.
21. All procedures, described in the maintenance section, must be carried out by qualified service personnel under the authority of the manufacturers recognised agent.

SAVE THESE INSTRUCTIONS